

Transmitter operation guide 遥控器操作指南

P10-3032




Power switch/Status lights
电源开关/状态灯

Blue light is always, light is alternately on and off for low voltage alarm.

蓝色灯常亮，低压报警指示灯交替亮和灭。

Transmitter function main interface 控制面板

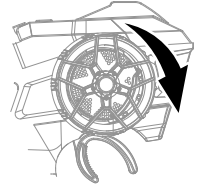

Twist forward to the maximum 3 times to turn on the emergency lights.

向前拧到最大3次开启双闪


CH1, Steering wheel
Turn left / Turn right

CH1 转向轮
左转 / 右转

CH2, Throttle trigger
Forward / Backward / Brake
CH2 油门/刹车扳手
前进 / 后退 / 刹车

Lanyard hole
挂绳孔


Transmitter function main interface 控制面板

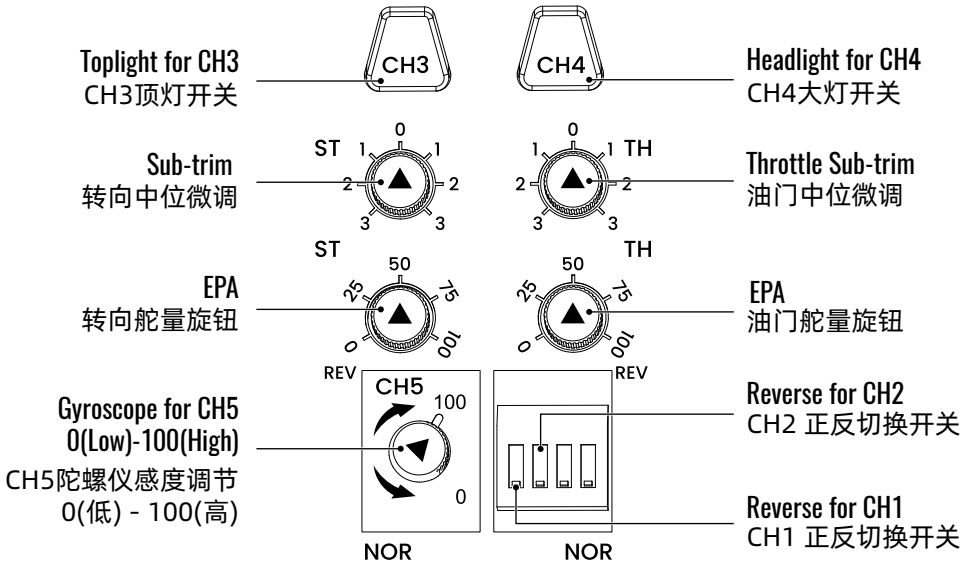

The steering rudder amount is recommended to be controlled within 75% to avoid excessive steering resulting in friction between the front wheel and the car shell, and the appropriate steering range can better maintain the body attitude and control comfort.

转向舵量建议控制在75%以内，避免过大转向导致前轮与车壳发生摩擦而产生磨损，合适的舵量范围能更好地保持车身姿态与操控舒适性。

Assembly of the transmitter battery 遥控器电池的装配

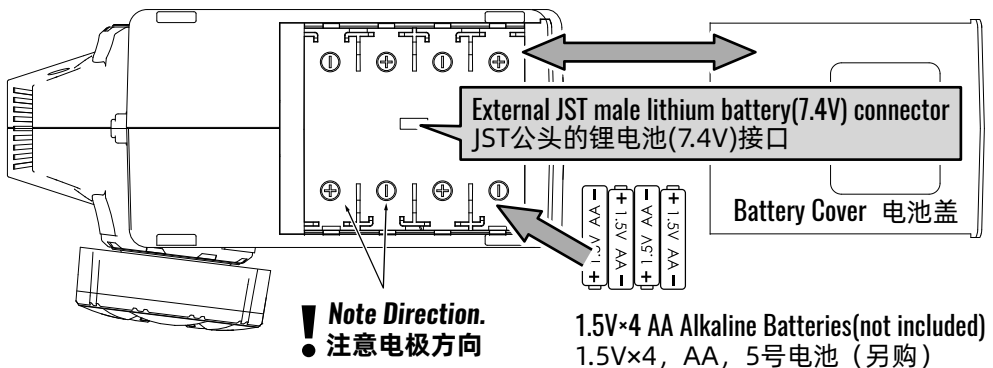

Open the battery cover at the bottom of the transmitter and install correctly according to the battery polarity direction specified in the battery box. Or insert the lithium battery of the JST head into the external battery connector of the battery compartment.


打开遥控器底部的电池盖，按照电池盒内指定的电池极性方向正确安装电池。或者将JST头的锂电池插入电池仓的外接电池接口上。

Gyroscope mode button 陀螺仪模式键

- 1) Press twice to turn the inverter receiver to the direction of the gyroscope of the channel.
 - 2) Press 3 times to turn on and off gyroscope sensitivity.
 - 3) Press 4 times to reverse the direction of the rotor gyroscope.
 - 4) Press 5 times, reverse phase throttle channel linkage tail attitude steering gear direction.
- 1) 按2次, 反相接收机转向通道的陀螺仪方向
 - 2) 按3次, 开启和关闭陀螺仪感度
 - 3) 按4次, 反相尾翼姿态舵机陀螺仪方向
 - 4) 按5次, 反相油门通道联动尾翼姿态舵机方向

ID matching button 对码键

Press twice to switch the reversing direction of the throttle and brake lights.
按2次, 切换油门刹车灯倒车灯方向

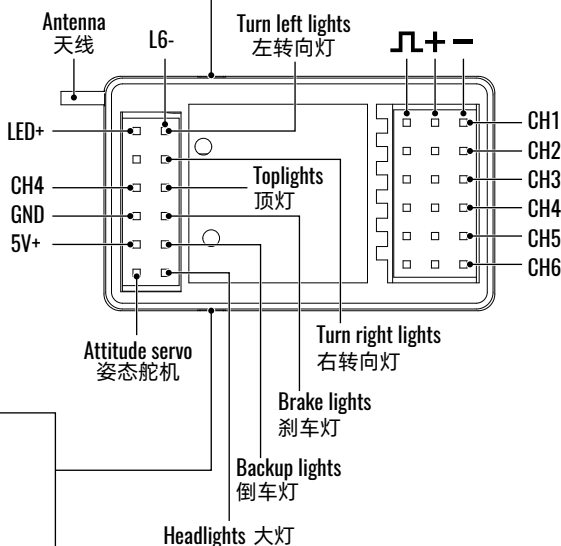


Frequency matching 对频

After changing the transmitter 更换遥控器后

The transmitter should be turned on first, press and hold the code key of the receiver for 3 seconds, the indicator light will flash to indicate that it enters the code matching mode, and the receiver will automatically look for the nearest remote-control signal, the indicator light will be on after the code matching is successful.



遥控器先开机, 按住接收机上面的对频键3秒, 指示灯快闪表示进入对频模式, 接收机自动寻找最近的遥控器信号, 对频成功后指示灯常亮。

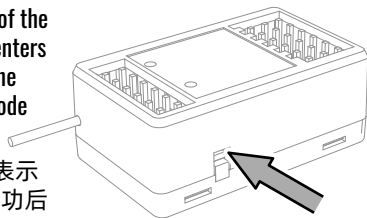


Control 控制




Throttle trigger
油门扳手

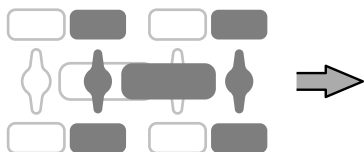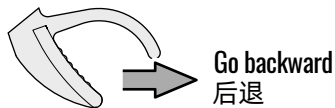


Steering wheel
转向轮

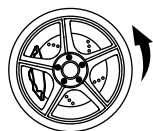


Turn left
左转

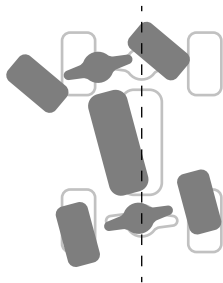



Steering wheel
转向轮

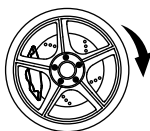



Turn right
右转

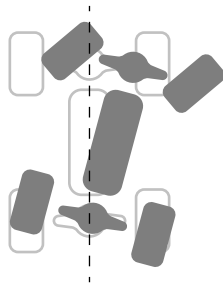


Turn left and move forward
前进并左转

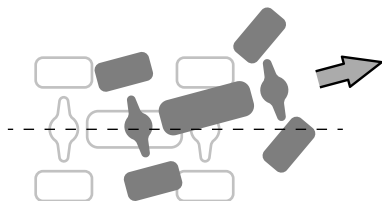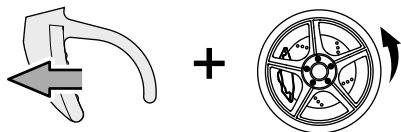


Turn right and move forward
前进并右转

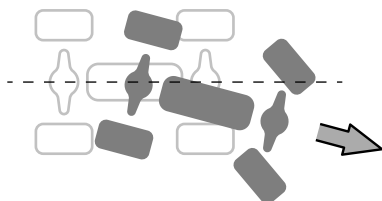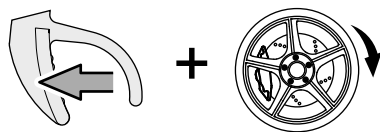


Turn left and move backward
后退并左转

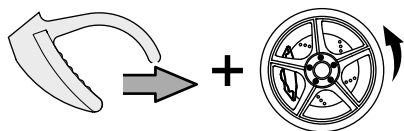

Turn right and move backward
后退并右转

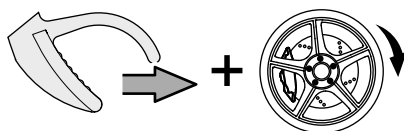


Low speed 低速

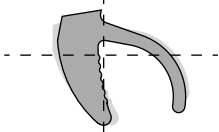


Pull the throttle trigger back gently and the car will move forward slowly.
向后轻拉油门扳手，
车辆慢速前进。

High speed 高速

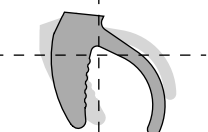

The throttle trigger is pulled to the maximum, and the car moves forward quickly.
油门扳手拉到最大，
车辆快速前进。

Brake 刹车

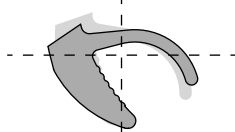

When the car is moving forward, the throttle trigger is pushed forward and the car stops moving.
车辆前进过程中，油门扳手往前推，车辆停止前进。